

# CIS

CoaXPress I/F  
25M CMOS (RAW) Camera

# VCC-25CXP1R

Product Specifications  
& Operational Manual

**CIS Corporation**

## Table of Contents

|          |   |    |
|----------|---|----|
| 1.       | Handling Precautions .....  | 3  |
| 1.1.     | Camera Handling Precautions .....   | 3  |
| 1.2.     | Restrictions on Applications .....  | 3  |
| 1.3.     | Disclaimers (Exception Clause) .....  | 3  |
| 2.       | Product Outline .....   | 4  |
| 2.1.     | Features .....  | 4  |
| 2.2.     | Bundled Items .....   | 4  |
| 3.       | Specifications .....  | 5  |
| 3.1.     | General Specifications .....  | 5  |
| 3.2.     | Input and Output .....  | 6  |
| 3.2.1    | Trigger Input (12pins circular connector, No. 11 pin) .....                                   | 6  |
| 3.2.2    | Exposure Output (12pins circular connector, No. 9 pin) .....                                  | 6  |
| 3.2.3    | FVALL_OUT/LVAL_OUT/ UplinkTrigger_OUT (12pins circular connector, No. 6, 7, and 10 pin) ..... | 7  |
| 3.3.     | External Connector Pin Assignment .....   | 7  |
| 3.3.1    | 12pins Circular Connector .....   | 7  |
| 3.3.2    | 75ΩDIN Connector (Quad-type) .....  | 7  |
| 3.3.3    | LED Indicator .....   | 8  |
| 3.4.     | Spectral Response .....   | 8  |
| 4.       | Camera Operational Function .....   | 9  |
| 4.1.     | Control System .....  | 9  |
| 4.2.     | Device Information .....  | 9  |
| 4.3.     | LED Operational Mode .....  | 9  |
| 4.4.     | Temperature Indication .....  | 9  |
| 4.5.     | Partial Scan (ROI) .....  | 10 |
| 4.6.     | Sub-Sampling .....  | 12 |
| 4.7.     | Flip .....  | 12 |
| 4.8.     | Pixel Format .....  | 13 |
| 4.9.     | Cursor Indication .....   | 13 |
| 4.10.    | Test Pattern Indication .....   | 14 |
| 4.11.    | Trigger Mode .....  | 14 |
| 4.11.1   | Internal Sync. Mode (Free Run Mode) .....   | 15 |
| 4.11.2   | External Trigger Sync. Mode .....   | 15 |
| 4.11.2.1 | Restrictions on Trigger Pulse Input Timing .....  | 16 |
| 4.11.2.2 | Trigger Input Timing and Delay Time to Start Exposure .....                                   | 16 |
| 4.11.2.3 | Fixed Trigger Shutter Mode .....  | 17 |
| 4.11.2.4 | Pulse Width Trigger Shutter Mode .....  | 18 |
| 4.12.    | Exposure Time .....   | 18 |
| 4.13.    | Gain .....  | 20 |
| 4.14.    | Black Level Adjustment .....  | 20 |
| 4.15.    | White Balance .....   | 21 |
| 4.16.    | Shading Correction .....  | 21 |
| 4.17.    | Defective Pixels Correction .....   | 22 |
| 4.18.    | Link Speed and Link Count .....   | 25 |
| 4.19.    | How to Save and Initialize the Settings .....   | 25 |
| 4.20.    | Sequence Control Function .....   | 26 |
| 4.20.1   | Basic Operation for Sequence Control Function .....   | 26 |
| 4.20.2   | Trigger Mode and Burst Mode Operational Outline .....   | 27 |
| 4.20.3   | Trigger Mode .....  | 27 |
| 4.20.4   | Burst Mode .....  | 28 |

|        |   |    |
|--------|---|----|
| 4.20.5 | Index Mode .....                            | 29 |
| 4.20.6 | Setting Items for Sequence Control .....    | 30 |
| 4.20.7 | Sequence Status Information .....           | 33 |
| 5.     | Factory Settings .....                      | 34 |
| 6.     | Dimensions .....                            | 36 |
| 6.1.   | Camera Dimensions .....                     | 36 |
| 6.2.   | Optical Axis Accuracy .....                 | 37 |
| 7.     | Case for Indemnity (Limited Warranty) ..... | 38 |
| 7.1.   | Product Warranty .....                      | 38 |
| 7.2.   | CMOS Pixel Defect .....                     | 38 |
| 7.3.   | Product Support .....                       | 38 |

Aegis Electronic Group  
www.aegiselect.com

## 1. Handling Precautions

### 1.1. Camera Handling Precautions

- Do not use or store the camera in the extremely dusty or humid places.
- Do not apply excessive force or static electricity that could damage the camera. Handle the camera with care.
- Do not shoot direct images that are extremely bright (e.g., strong light source, sun, etc.). When strong light such as spot light was shot, blooming or smear may occur. Put the lens cap on when camera is not in use.
- Follow the instructions in [Chapter 3.3. "External Connector Pin Assignment"](#) for connecting the camera module. Improper connection may cause damages not only to the camera module but also to the connected devices.
- Confirm the mutual ground potential carefully before connecting the camera to monitors or computers. Any AC leaks or coupling noises from the connected devices may cause damages or destroy the camera.
- Do not apply excessive voltage. (Use only the specified voltage.) Unstable or improper power supply voltage may cause damages or malfunction of the camera assembly.
- The voltage ripple of camera power DC+12~24V±10% shall be within ±50mV. Improper power supply voltage may cause noises on the video signals.
- Please be careful when using external power to the camera since the voltage depression may be bigger depending on the thickness and the length of the cable. Please refer below for the external power specifications.  
[Recommended value for power voltage]

1. Power voltage: V    2. Cable length: ℓ(m)    3. Resistance value of cable per 1m: r(Ω)

[Formula to calculate the output voltage of external power]

$$V[V] = 12[V] + r[\Omega/m] \times \ell[m] \times 1[A] \quad V$$

The [V] value from the formula above shall regard as within the range of power voltage specifications.

- The rising time of camera power supply voltage shall be less than +10V, Max. 60ms. Please avoid noises like chattering when rising.
- Our warranty does not apply to damages or defects caused by irregular and/or abnormal use of the product.

### 1.2. Restrictions on Applications

- The camera must not be used for any nuclear equipment or aerospace equipment with which mechanical failure or malfunction could result in serious bodily injury or loss of human life.
- The camera must not be used under conditions or environments other than specified in this manual.

### 1.3. Disclaimers (Exception Clause)

CIS shall be exempted from taking responsibility and held harmless for damages or losses incurred by the following cases.

- In case damages or losses are caused by earthquake, lightning strike, fire, flood, or other acts of God.
- In case damages or losses are caused by deliberate or accidental misuse by the user, or failure to observe the information contained in the instructions in this Product Specification and Operational Manual.
- In case damages or losses are caused by repair or modification conducted by the customer or any unauthorized party.

## 2. Product Outline

VCC-25CXP1R is a CoaXPress interfaced color camera utilizing an APS-H type, 25M pixels CMOS image sensor.

### 2.1. Features

- 65mm x 65mm x 65mm cubic in size
- Global shutter type CMOS (Color)
- CoaXPress CXP-1, CXP-2, CXP-3, CXP-5, and CXP-6
- Four Lanes
- PoCXP
- The maximum cable length: Approx. 100m at CXP-1, and Approx. 40m at CXP-6.
- ROI
- Sub-sampling
- Exposure time, Gain settings
- One push white balance
- External trigger mode (Fixed trigger shutter mode / Pulse width trigger shutter mode)
- GenICam complied
- M48 lens mount

### 2.2. Bundled Items

- Standard Bundled Items
  - ♦ Camera module, VCC-25CXP1R
- Optional Items
  - ♦ M48 to F lens mount conversion adaptor
- Packaging
  - ♦ Individual carton

## 3. Specifications

## 3.1. General Specifications


| Electrical Specifications                 |                        |  |                                       |
|---|------------------------|--|---------------------------------------|
| Pick Up Device                            | Device type            | APS-H type, Global shutter type CMOS sensor  |                                       |
|   | Effective pixel number | 5120(H) × 5120(V)  |                                       |
|   | Unit cell size         | 4.5μm(H) × 4.5μm(V)  |                                       |
| Video Output Mode                         |                        | Ver. 1.1.1 complied CXP6 / CXP5 / CXP3 / CXP2 / CXP1 ×4 each   |                                       |
| Video Output Frequency                    | Pixel clock frequency  | 72MHz  |                                       |
| Video Output Format                       |                        | BayerBG8 / BayerBG10   |                                       |
| Frame Rate                                | CXP1 8bit/10bit        | 17.17fps/13.73fps  |                                       |
|   | CXP2 8bit/10bit        | 30.52fps/24.41fps  |                                       |
|   | CXP3 8bit/10bit        | 40.13fps/33.80fps  |                                       |
|   | CXP5 8bit/10bit        | 68.40fps/54.72fps  |                                       |
|   | CXP6 8bit/10bit        | 81.83fps/65.10fps  |                                       |
| Video Output Pixel Size (Max. Pixel Size) |                        | 5120(H) × 5120(V)  |                                       |
| Video Signals<br>(Gain: 0dB)              | White clip level       | FFh  | At BayerBG 8bit                       |
|   | Set up level           | 02h±02h  | At BayerBG,<br>and at factory setting |
|   | Dark shading           | 0~2(H), 0~5(V)   | At BayerBG,<br>and at factory setting |
| Sensitivity                               |                        | F5.6 2000lx (Shutter speed 1/30s, Gain 0dB)  |                                       |
| Minimum Illumination                      |                        | F2.6 25lx (Shutter1/30s, Gain+18dB, level=50%)   |                                       |
| Gain Variable Range                       |                        | x1~x8 (0dB~18dB)   |                                       |
| Shutter Speed                             |                        | Preset: 1/30000, 1/10000, 1/5000, 1/2000, 1/1000, 1/500, 1/200, 1/100, 1/60, 1/50, 1/30 [s]<br>Manual: 30[μs]~72590[μs]  |                                       |
| Gamma Correction                          |                        | None (γ=1)   |                                       |
| Trigger Mode                              |                        | Free run mode (Camera internal trigger)<br>Trigger mode (Host, external terminal)<br><ul style="list-style-type: none"> <li>▪ Fixed trigger shutter</li> <li>▪ Pulse width trigger shutter mode</li> </ul> |                                       |
| Partial Scan                              |                        | 10 Preset patterns (4096x4096, 4096x3072, 3840x2896, 3840x2160, 2560x2048, 2048x2048, 2048x1440, 1920x1200, 1920x1080, 1280x1024)  |                                       |
| Sequence Function                         |                        | For each 16 parameter set,<br>Start (X,Y) coordinate, Horizontal size, Vertical size, Exposure, and Gain settings<br>Control mode: Trigger mode, Burst mode, and Index mode                                |                                       |
| Power Requirements                        |                        | 12pins circular connector or PoCXP<br>12pin: 12V~24V   |                                       |
| Power Consumption                         |                        | 8.0W (CXP-1), 10.6 W (CXP-6), [At free run]  |                                       |
| Mechanical Specifications                 |                        |  |                                       |
| Dimensions                                |                        | H:65mm W:65mm D:65mm (Without protruding portion)  |                                       |
| Weight                                    |                        | Approx. 290g   |                                       |
| Lens Mount                                |                        | M48 mount  |                                       |

| Environmental Specifications   |           |   |                               |
|--|-----------|---|-------------------------------|
| Safety/Quality Standard  |           |   |                               |
| UL: Conform to UL for all the materials.<br>CE:<br>EMC: 2014/30/EU<br>Conform to EN61000-6-4:2007+A1:2011 for Emission<br>Conform to EN61000-6-2:2005 for Immunity<br>RoHS: 2011/65/EU<br>Conform to EN50581 (RoHS2) |           |   |                               |
| Durability   | Vibration | Acceleration  | : 98m/s <sup>2</sup> (10G)    |
|  |           | Frequency   | : 20~200Hz                    |
|  |           | Direction   | : X, Y, and Z 3 directions    |
|  |           | Testing time  | : 120 min for each directions |
|  | Shock     | No malfunction shall occur with the maximum 980m/s <sup>2</sup> (100)G for ±X, ±Y, and ±Z 6 directions without packaging. |                               |
| Operation Guaranteed Environment   |           | Temperature: 0~+45°C<br>Humidity: 20~80% RH with no condensation  |                               |
| Storage Environment  |           | Temperature: -25~+60°C<br>Humidity: 20~80%RH with no condensation   |                               |

### 3.2. Input and Output


#### 3.2.1 Trigger Input (12pins circular connector, No. 11 pin)

- 5.0V, 3.3V CMOS level input (TTL level)
- Input voltage Low: 0.5Vdc (Max.), High: 2.1Vdc (Min.)
- To use this terminal, please set TriggerSource of AcquisitionControl to Line0.

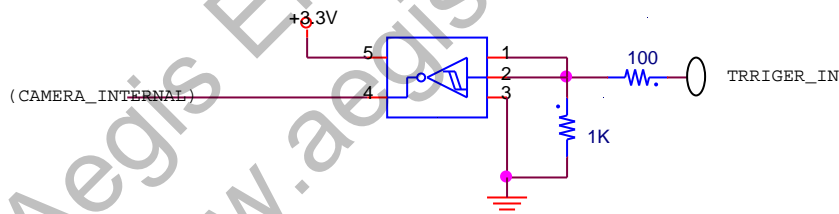


#### 3.2.2 Exposure Output (12pins circular connector, No. 9 pin)

- 5.0V, CMOS Logic level output
- Output voltage Low: 0.55Vdc (Max.), High: 3.8Vdc (Min.)

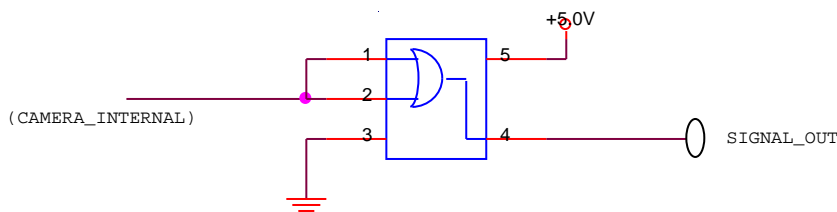


3.2.3 FVALL\_OUT/LVAL\_OUT/ UplinkTrigger\_OUT (12pins circular connector, No. 6, 7, and 10 pin)

- 5.0V, CMOS Logic level output
- Output voltage Low: 0.55Vdc (Max.), High: 3.8Vdc (Min.)

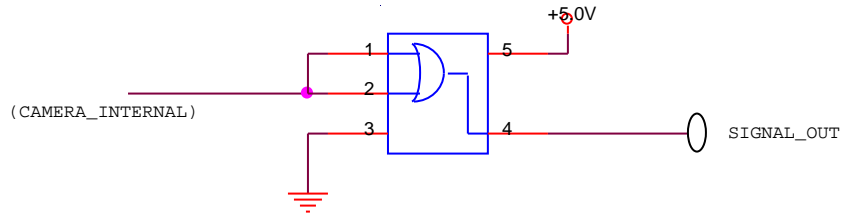

3.3. External Connector Pin Assignment

3.3.1 12pins Circular Connector

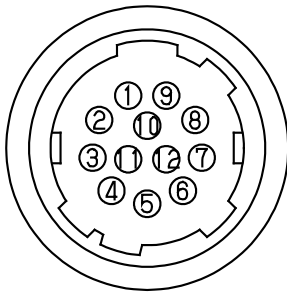

HR10-10R-12PA(73)  
(HIROSE or equivalent)

| Pin No. | Signals         | Note  |
|---------|-----------------|---|
| 1       | GND             | GND   |
| 2       | Power           | External power input  |
| 3       | NC              |   |
| 4       | NC              |   |
| 5       | GND             | GND   |
| 6       | LVAL_OUT        | Line read out signals output  |
| 7       | FVAL_OUT        | Frame read out signals output                                       |
| 8       | GND             | GND   |
| 9       | EXPOSURE_OUT    | Sensor exposure signals output                                      |
| 10      | LinkTrigger_OUT | External trigger signals output from the Host Device (LinkTrigger0) |
| 11      | TRIGGER_IN      | External trigger input (Line0)                                      |
| 12      | GND             | GND   |


※NC=Non-Connection. Do not connect anything to the terminal.

※LinkTrigger\_OUT is the signal to monitor the external trigger signals from the Host Device.

※Reference: HR10-10R-12PA can connect Max. AWG26.

3.3.2 75ΩDIN Connector (Quad-type)

- CoaXPress Video output signals (Four lines need to be connected).
- No. 1 pin is the connector for PoCXP.

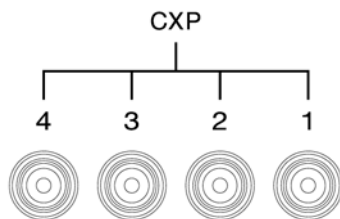

(Cambridge Connector)

## 3.3.3 LED Indicator


- When it is ON, lighting patterns of LED shows the camera status by the way of its lighting.

|                                     |   |
|-------------------------------------|---|
| OFF                                 | No Power supplied                                     |
| Green/Orange Fast Blinking [12.5Hz] | Four cable lines are not connected.                   |
| Green Lighting                      | Confirmed connection of the device and the host.      |
| Green Fast Blinking [12.5Hz]        | Transmitting video data.                              |
| Orange Slow Blinking [1Hz]          | Waiting for a trigger input                           |
| Red Slow Blinking [0.5Hz]           | System error occurred or inappropriate trigger input. |

## 3.4. Spectral Response

- ※ The lens characteristic and the illuminant characteristics are excluded.

## Quantum Efficiency

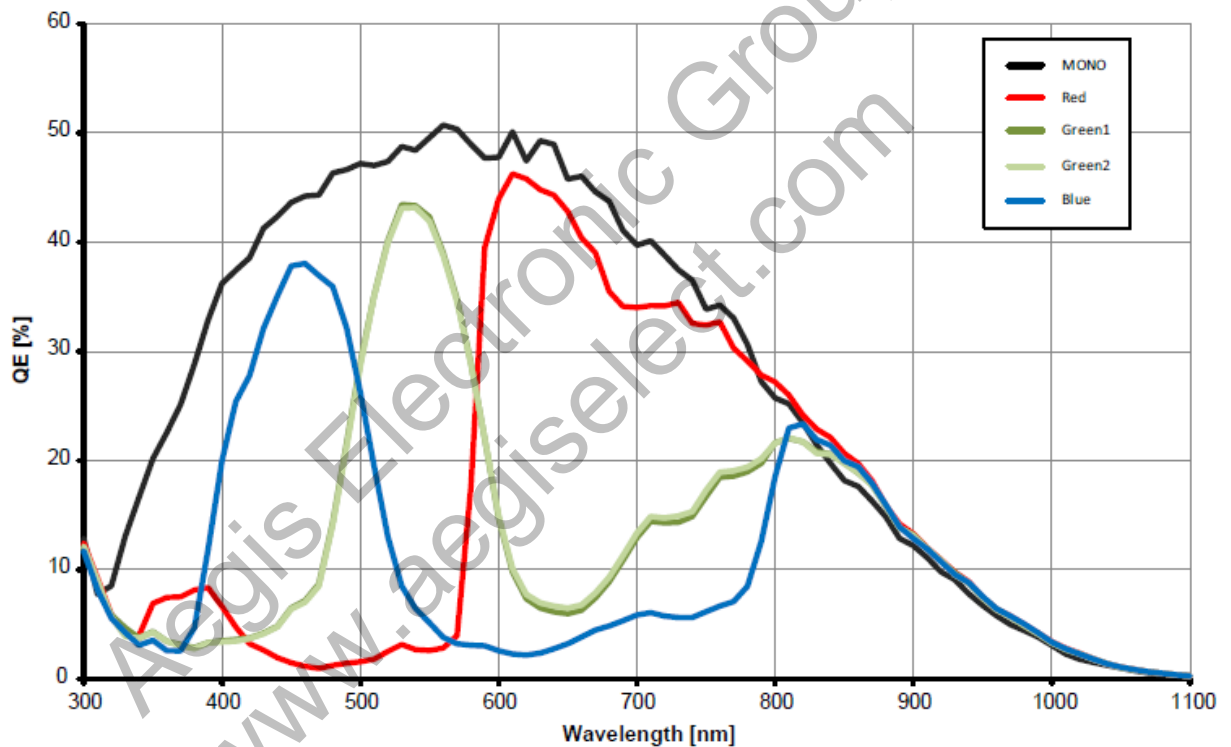

## 4. Camera Operational Function

## 4.1. Control System

- Complies with CoaXPress standard.

[Note] The indication of the parameter name for the commands may vary depend on the software you use.

## 4.2. Device Information

- This is to indicate the camera status.

| DeviceControl         |            |
|-----------------------|------------|
| DeviceModelName       | (ReadOnly) |
| DeviceVersion         | (ReadOnly) |
| DeviceFirmwareVersion | (ReadOnly) |
| DeviceSerialNumber    | (ReadOnly) |

- DeviceModelName : Model name of the camera
- DeviceVersion : Circuit Version
- DeviceFirmwareVersion : Firmware Version
- DeviceSerialNumber : Serial number of the camera

- A letter string consisting of the maximum 16 characters, including the terminal NUL letter (\0), can be set to the camera. To save it into the volatile memory of the camera, execute "UserSetSave". Execute "UserSetDefault" to restore it to the factory setting.

| DeviceControl |                   |
|---------------|-------------------|
| DeviceUserID  | [User Definition] |

## 4.3. LED Operational Mode

- This is to change LED operation of the camera rear. For the lighting patterns, please refer to the LED Indicator.

| DeviceControl       |                                   |
|---------------------|-----------------------------------|
| DeviceIndicatorMode | Active<br>ErrorStatus<br>Inactive |

- Active : Indicate the communication status of CoaXPress
- ErrorStatus : OFF at normal operation.
- Lights only when video transmitting error occurs or when an inappropriate trigger is input.
- Inactive : ALL LED OFF

## 4.4. Temperature Indication

- This is to indicate the temperature register value of the camera sensor.

| DeviceControl     |            |
|-------------------|------------|
| DeviceTemperature | (ReadOnly) |

[Note]

- The register value is not calibrated.  
Temperature register value (Referenced values)

|                         |    |     |     |
|-------------------------|----|-----|-----|
| Sensor Temperature [°C] | 30 | 40  | 50  |
| DeviceTemperature Value | 94 | 108 | 122 |

## 4.5. Partial Scan (ROI)


- This is to increase its frame rate by cutting out and reducing the read out area.
- This function cannot be used with sub-sampling function.

| ImageFormatControl |              |
|--------------------|--------------|
| Width              |              |
| Height             |              |
| OffsetX            | X coordinate |
| OffsetY            | Y coordinate |
| ROIQuickChange*    | (Execute)    |

- Preset ROI
  - "Width", "Height", "OffsetX", and "OffsetY" shall be updated when "ROIQuickChange(Xsize)x(Ysize)" is executed.
  - Ten patterns of ROI are prepared as preset ROI.
  - When "ROIQuickChange(Xsize)x(Ysize)" is executed, ROI is to be cut out from the center.
  - Execute "ROIQuickChangeOff" to get back to the Full size of 5120x5120.
  - The frame rates for each "ROIQuickChange(Xsize)x(Ysize)" shall be as the chart below, "Preset ROI frame rate", depending on their image size, pixel format, and link rate.
- Custom ROI
  - With Width, ROI size of X direction can be specified per 64 pixels.
  - With Height, ROI size of Y direction can be specified per 2 pixels.
  - With OffsetX, the offset from the left side in X direction of ROI can be specified per 64 pixels.
  - With OffsetY, the offset from the top side in Y direction of ROI can be specified per 2 pixels.
  - OffsetX and OffsetY shall be set as follows.  
 $\text{OffsetX} + \text{Width} \leq 5120$ ,  $\text{OffsetY} + \text{Height} \leq 5120$
  - The frame rates for the customized ROI shall be limited by the frame rates defined in the "Preset ROI frame rate" as shown in the chart in the next page "Custom ROI frame rate" depending on its Width and Height.

## [Note]

- Frame rate shall be limited only at internal sync. mode. At external sync. mode, the frame rate shall operate with external trigger cycle.
- In case of external sync. mode and the Height is 1024 or more, frame rate shall be changed to line shape with Height. In case of Height is less than 1024, frame rate shall not be changed to line shape with Height. Please refer to [Section 4.11.2.1](#) and note that there are restrictions on trigger pulse input timing.

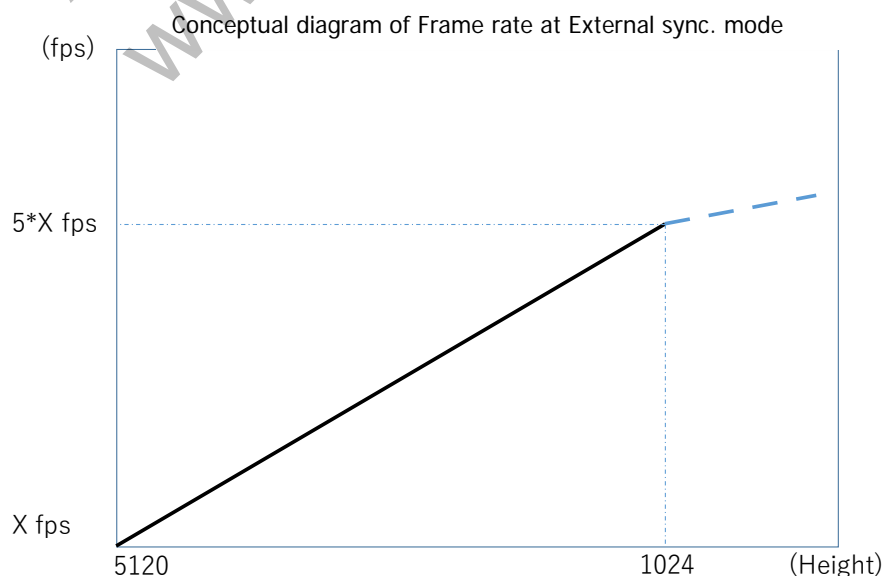

Preset ROI frame rate [fps]

| ROI Setting Mode<br>(WidthxHeight,OffsetX,OffsetY) | Known as   | PixelFormat | Link Rate |         |         |         |         |
|--|------------|-------------|-----------|---------|---------|---------|---------|
|  |            |             | CXP1_X4   | CXP2_X4 | CXP3_X4 | CXP5_X4 | CXP6_X4 |
| ROIQuickChangeOff<br>(5120x5120,0,0)               | 25M        | BayerBG8    | 17.17     | 30.52   | 40.13   | 68.40   | 81.38   |
|  |            | BayerBG10   | 13.73     | 24.41   | 33.80   | 54.72   | 65.10   |
| ROIQuickChange4096x4096<br>(4096x4096,512,512)     | 16M        | BayerBG8    | 23.88     | 43.95   | 61.04   | 87.90   | 124.67  |
|  |            | BayerBG10   | 18.62     | 39.24   | 49.94   | 79.18   | 99.74   |
| ROIQuickChange4096x3072<br>(4096x3072,512,1024)    | 12M        | BayerBG8    | 30.52     | 57.82   | 78.47   | 115.65  | 162.76  |
|  |            | BayerBG10   | 24.97     | 52.32   | 68.67   | 102.21  | 130.21  |
| ROIQuickChange3840x2896<br>(3840x2896,640,1112)    | 10M        | BayerBG8    | 34.33     | 64.75   | 87.03   | 125.57  | 175.81  |
|  |            | BayerBG10   | 26.80     | 58.21   | 75.77   | 114.16  | 140.63  |
| ROIQuickChange3840x2160<br>(3840x2160,640,1480)    | 4K<br>QFHD | BayerBG8    | 45.78     | 82.92   | 118.78  | 154.20  | 231.32  |
|  |            | BayerBG10   | 34.88     | 75.77   | 102.21  | 137.34  | 185.05  |
| ROIQuickChange2560x2048<br>(2560x2048,1280,1536)   | 5M         | BayerBG8    | 54.93     | 114.16  | 122.07  | 175.69  | 244.14  |
|  |            | BayerBG10   | 40.69     | 94.51   | 122.07  | 175.69  | 195.31  |
| ROIQuickChange2048x2048<br>(2048x2048,1536,1536)   | 4M         | BayerBG8    | 57.82     | 122.07  | 122.93  | 189.04  | 244.14  |
|  |            | BayerBG10   | 42.26     | 109.87  | 122.93  | 189.04  | 195.31  |
| ROIQuickChange1920x1440<br>(1920x1440,1600,1840)   |            | BayerBG8    | 78.47     | 169.03  | 169.03  | 244.14  | 351.12  |
|  |            | BayerBG10   | 61.04     | 156.96  | 169.03  | 244.14  | 281.29  |
| ROIQuickChange1920x1200<br>(1920x1200,1600,1960)   | WUXGA      | BayerBG8    | 91.56     | 199.76  | 199.76  | 288.18  | 399.52  |
|  |            | BayerBG10   | 73.24     | 187.02  | 199.76  | 288.18  | 319.69  |
| ROIQuickChange1920x1080<br>(1920x1080,1600,2020)   | Full HD    | BayerBG8    | 109.87    | 222.52  | 222.52  | 313.97  | 462.75  |
|  |            | BayerBG10   | 78.47     | 204.42  | 222.52  | 313.97  | 370.10  |
| ROIQuickChange1280x1024<br>(1280x1024,1920,2048)   | SXGA       | BayerBG8    | 122.07    | 244.14  | 244.14  | 374.11  | 487.57  |
|  |            | BayerBG10   | 84.52     | 219.73  | 244.14  | 374.11  | 390.63  |

Custom ROI frame rate [fps] (In case of CXP6\_X4, BayerBG8)

| Width<br>Height | 5120 $\geq$ | 4096 $\geq$ | 3840 $\geq$ | 2560 $\geq$ | 2048 $\geq$ | 1920 $\geq$ | 1280 $\geq$ |
|-----------------|-------------|-------------|-------------|-------------|-------------|-------------|-------------|
| 5120 $\geq$     | 81.38       | 81.38       | 81.38       | 81.38       | 81.38       | 81.38       | 81.38       |
| 4096 $\geq$     | 81.38       | 124.67      | 124.67      | 124.67      | 124.67      | 124.67      | 124.67      |
| 3072 $\geq$     | 81.38       | 162.76      | 162.76      | 162.76      | 162.76      | 162.76      | 162.76      |
| 2896 $\geq$     | 81.38       | 162.76      | 175.81      | 175.81      | 175.81      | 175.81      | 175.81      |
| 2160 $\geq$     | 81.38       | 162.76      | 231.32      | 231.32      | 231.32      | 231.32      | 231.32      |
| 2048 $\geq$     | 81.38       | 162.76      | 231.32      | 244.14      | 244.14      | 244.14      | 244.14      |
| 1440 $\geq$     | 81.38       | 162.76      | 231.32      | 244.14      | 244.14      | 351.12      | 351.12      |
| 1200 $\geq$     | 81.38       | 162.76      | 231.32      | 244.14      | 244.14      | 399.52      | 399.52      |
| 1080 $\geq$     | 81.38       | 162.76      | 231.32      | 244.14      | 244.14      | 462.75      | 462.75      |
| 1024 $\geq$     | 81.38       | 162.76      | 231.32      | 244.14      | 244.14      | 462.75      | 487.57      |


Note 1)      in the above chart is the frame rate defined by ROIQuickChange(Width)x(Height).

Note 2)      is defined by "Preset ROI frame rate" in case of when link rate is other than link rate=CXP6\_X4, and in case of when PixelFormat=BayerBG10. The value shall be limited to the smaller value in each Width and Height.

4.6. Sub-Sampling

| ImageFormatControl |                                   |
|--------------------|-----------------------------------|
| Subsampling        | Subsampling_Off<br>Subsampling_On |

- This is to increase its frame rate by reducing the pixel numbers to read out, reducing both horizontal and vertical pixel number in half, that is, 1/4 of the entire pixels. The field of angle remains the same as the one for full resolution.
- This function cannot be used with ROI function.
- When sub-sampling is in use, pixel defective correction function cannot be used.

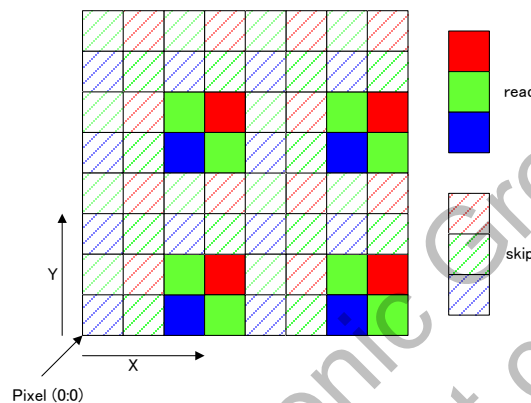


Frame rate of Sub-sampling mode [fps]

| Subsampling mode<br>(Pixel number) | PixelFormat | Link rate |         |         |         |         |
|------------------------------------|-------------|-----------|---------|---------|---------|---------|
|                                    |             | CXP1_X4   | CXP2_X4 | CXP3_X4 | CXP5_X4 | CXP6_X4 |
| Subsampling<br>(2560x2560)         | BayerBG8    | 49.94     | 85.33   | 85.33   | 137.33  | 199.75  |
|                                    | BayerBG10   | 46.75     | 79.90   | 85.33   | 137.33  | 159.80  |

4.7. Flip

| ImageFormatControl |            |
|--------------------|------------|
| ReverseX           | True/False |
| ReverseY           | True/False |

- ◆ ReverseX : Flip the image of X direction
- ◆ ReverseY : Flip the image of Y direction
- The position of color filter of the sensor shall be like below in case of ReverseX=False, and ReverseY=False.  
Bayer : BGGR



- When the settings for ReverseX and ReverseY are changed, PixelFormat shall be switched automatically as below.

| ReverseX | ReverseY | PixelFormat |
|----------|----------|-------------|
| False    | False    | BayerBG8/10 |
| True     | False    | BayerGB8/10 |
| False    | True     | BayerGR8/10 |
| True     | True     | BayerRG8/10 |

#### 4.8. Pixel Format

| ImageFormatControl |                       |
|--------------------|-----------------------|
| PixelFormat        | BayerBG8<br>BayerBG10 |

- ♦ BayerBG8 : Bayer 8bit (At ReverseX=False, ReverseY=False)
- ♦ BayerBG10 : Bayer 10bit (At ReverseX=False, ReverseY=False)

- The color shall be indicated on the viewer when BayerBG8/10 is selected.
- The indication of PixelFormat shall switch automatically depends on the combination of the settings of ReverseX, and ReverseY.

#### 4.9. Cursor Indication

- Cursor can be shown on the screen.

| ImageFormatControl |              |
|--------------------|--------------|
| ShowCursor         | On/Off       |
| CursorX            | X coordinate |
| CursorY            | Y coordinate |
| CursorColor        | White/Black  |

- ShowCursor : Specify if the cursor shall be indicated or not. (On/Off)
- CursorX : Specify the X coordinate of the vertical cursor.
- CursorY : Specify the Y coordinate of the horizontal cursor.
- CursorColor : Specify the color of the cursor. (Black or White)

The actual color shall change depends on whether X /Y coordinate is odd or even.

When the CursorColor is White, and the coordinate is odd: Orange

When the CursorColor is White, and the coordinate is even: Pale blue

When the CursorColor is Black, and the coordinate is odd: Blue

When the CursorColor is Black, and the coordinate is even: Brown

[Note]

- ♦ When Reverse or ROI are shown, cursor coordinates shall be as follows.
  - ReverseX=False, ReverseY=False: The top left of ROI screen is the origin of (0,0)
  - ReverseX=True, ReverseY=False: The top right of ROI screen is the origin of (0,0)
  - ReverseX=False, ReverseY=True: The bottom left of ROI screen is the origin of (0,0)
  - ReverseX=True, ReverseY=True: The bottom right of ROI screen is the origin of (0,0)
- ♦ Cursor may not be shown when the screen size is scaled down.
- ♦ The width of the cursor for X coordinate and Y coordinate are two lines each.
- ♦ Cursor indication cannot be set when test pattern indication is ON.


## 4.10. Test Pattern Indication

- Test pattern can be output from the camera. It is useful to check if your system is operating properly.

| ImageFormatControl |        |
|--------------------|--------|
| TestPattern        | ON/OFF |

[Note]

- ♦ Test pattern indication function cannot be set when cursor indication is ON.

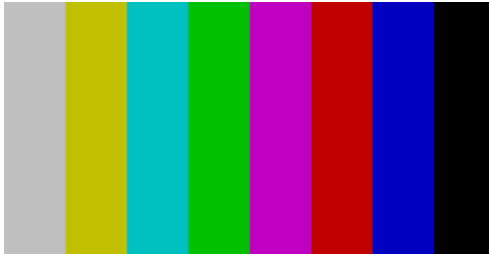

## 4.11. Trigger Mode

| Acquisition Control          |  |
|------------------------------|--|
| TriggerSelectorAndActivation | AcquisitionMode<br>FrameStartRisingEdge<br>FrameStartFallingEdge<br>FrameStartLevelHigh<br>FrameStartLevelLow<br>FrameBurstStart |
| TriggerSource                | LinkTrigger0<br>Line0  |
| TriggerSoftware              | (Execute)  |
| AcquisitionFrameRate         | (ReadOnly)   |

- ♦ **TriggerSelectorAndActivation** : Trigger selector  
This is to select how to start capturing video or its polarity out of the followings.
  - ♦ **AcquisitionMode** : Free run mode [Internal sync. mode]
  - ♦ **FrameStartRisingEdge** : Fixed trigger shutter mode: Rising edge [External sync. mode]
  - ♦ **FrameStartFallingEdge** : Fixed trigger shutter mode: Falling edge [External sync. mode]
  - ♦ **FrameStartLevelHigh** : Pulse width trigger shutter mode: High active [External sync. mode]
  - ♦ **FrameStartLevelLow** : Pulse width trigger shutter mode: Low active [External sync. mode]
  - ♦ **FrameBurstStart** : Burst mode of Sequence function [Internal sync. mode]
- ♦ **TriggerSource** : Trigger source  
This is to select where to input the external trigger.
  - ♦ **LinkTrigger0** : External trigger input from the CoaXPress Host Device  
Please refer to the specification manuals of the Host Device such as frame grabber board to know how to generate triggers.
  - ♦ **Line0** : External trigger input from the 12pins circular connector.
- ♦ **TriggerSoftware** : Software trigger  
A trigger is generated in the camera and capture images for 1 frame when this command is executed.  
This command is valid when TriggerSelectorAndActivation is at FrameStartRisingEdge or FrameBurstStart.
- ♦ **AcquisitionFrameRate** : Frame rate of internal sync. mode  
It shows frame rate of internal sync. mode.

## 4.11.1 Internal Sync. Mode (Free Run Mode)

- This is a mode to use triggers continuously made in the camera. No external trigger shall be used.
- Set TriggerSelectorAndActivation to AcquisitionMode.
- Frame rates [fps] when ROI is invalid are as follows.

| PixelFormat | CXP1_X4 | CXP2_X4 | CXP3_X4 | CXP5_X4 | CXP6_X4 |
|-------------|---------|---------|---------|---------|---------|
| BayerBG8    | 17.17   | 30.52   | 40.13   | 68.40   | 81.38   |
| BayerBG10   | 13.73   | 24.41   | 33.80   | 54.72   | 65.10   |


## 4.11.2 External Trigger Sync. Mode

- This is a mode to input external trigger signals to capture images by any preferred timings.
- Set "TriggerSelectorAndActivation" to other than "AcquisitionMode".

Aegis Electronic Group  
www.aegiselect.com

4.11.2.1 Restrictions on Trigger Pulse Input Timing

- The next trigger pulse can be input while reading out signals. However, please do not input a trigger pulse which ends its exposure while reading out the prior signals. In other words, a trigger pulse, while reading out signals for the prior frame and starts reading out signals for the next frame, cannot be input.

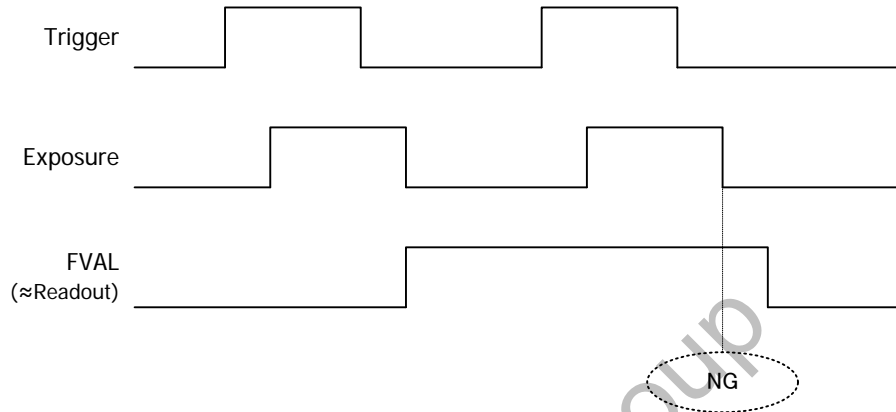

- When a trigger is input with the restricted timing explained the above, or with the timing to end exposure right after FVAL becomes "L", video output from the camera might be stopped or the image turns to be all black.
- In case of when the camera stopped operation while normal operation, or when proper video image were not output, stop the trigger input and execute "SensorReset" command to re-start camera operation.
- In case of when the camera stopped operation while sequence mode, or when proper video image were not output, turn OFF SequencerActivation, and execute "SensorReset" command to re-start camera operation.

| Device Control |           |
|----------------|-----------|
| SensorReset    | (Execute) |

4.11.2.2 Trigger Input Timing and Delay Time to Start Exposure


- Due to image sensor's own characteristics, the timing, for standard operation and overlapped operation, from when a trigger is input to the image sensor to when the actual exposure starts, would be different.

Trigger Input Timing and Delay Time to Start Exposure [μs]

|  | Link rate |         |         |         |         |
|--|-----------|---------|---------|---------|---------|
|  | CXP1_X4   | CXP2_X4 | CXP3_X4 | CXP5_X4 | CXP6_X4 |
| Exposure Delay [μs] to start exposure for Standard operation<br>※Timing chart: Exposure delay time (A)   | 9.6       | 9.5     | 9.5     | 9.5     | 9.5     |
| Exposure Delay [μs] to start exposure for overlapped operation<br>※Timing chart: Exposure delay time (B) | 9.6~27    | 9.5~18  | 9.5~18  | 9.5~14  | 9.5~12  |


## 4.11.2.3 Fixed Trigger Shutter Mode

- This is the mode to start exposure by the input trigger signals. Exposure time is the set time with "Exposure Time".
- Set "TriggerSelectorAndActivation" to "FrameStartRisingEdge" or "FrameStartFallingEdge".
- Trigger cycle needs to be longer than FVAL period (Frame data reading out period).
- Trigger cycle needs to be longer than the exposure time.
- Trigger operation is CLK Sync. H-V Sync. Reset.
- The trigger pulse width to be input is 30us ~ Max. Exposure time.
- The maximum exposure time depends on ROI setting, PixelFormat, and Link rate (Please refer to the Section 4.12, Exposure Time).

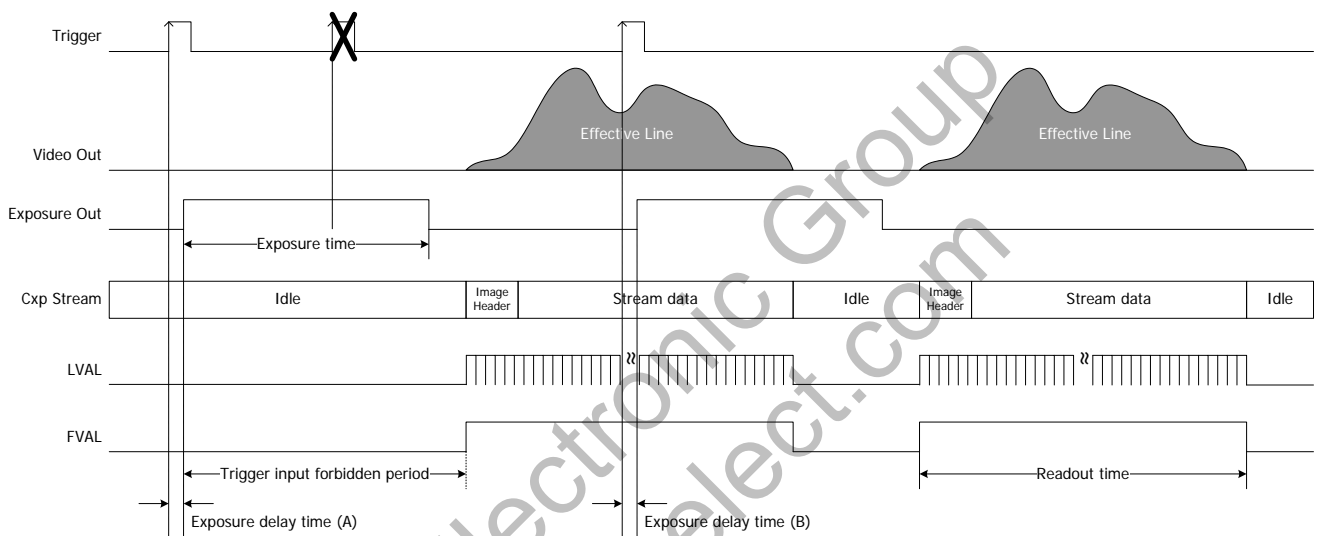

4.11.2.4 Pulse Width Trigger Shutter Mode

- This is the mode to start exposure by the input trigger signals. The exposure time is its trigger pulse width.
- Set "TriggerSelectorAndActivation" to "FrameStartLevelHigh" or "FrameStartLevelLow".
- Trigger cycle needs to be longer than FVAL period (Frame data reading out period).
- Trigger operation is CLK Sync. H-V Sync. Reset.
- The minimum trigger pulse width to be input shall be 30µs. (Please refer to the restrictions on trigger pulse input).
- Functionally, there is no upper limitation. However, at long exposure, some noises, lines, pixel-wise FPN, and shading might be noticeable.

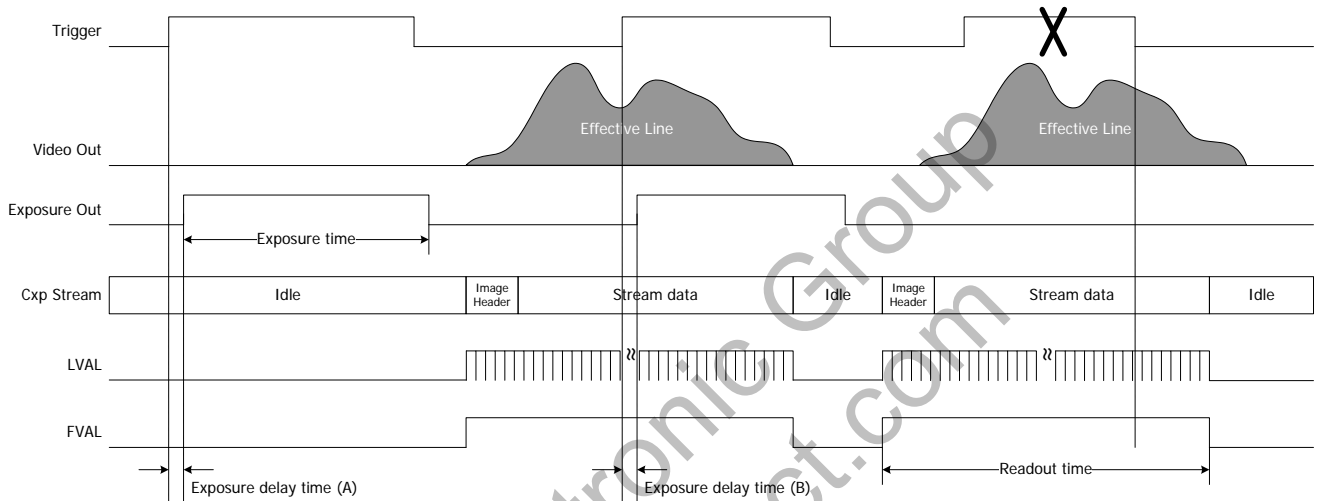

4.12. Exposure Time

| Acquisition Control |                       |
|---------------------|-----------------------|
| ExposureTime (µs)   | 30~Max. Exposure time |
| ExposureTimeMax     | (ReadOnly)            |
| PresetShutter1_Xs   | (Execute)             |

◆ ExposureTime

Exposure time can be set per 1µs. The minimum exposure time is 30µs.

The maximum exposure time depends on ROI settings, PixelFormat, and Link rate. The smaller values than the chart in the next page shall be set.

| ROI setting mode<br>(Video image size) | Known<br>as | Pixel<br>format | Link rate |         |         |         |         |
|--|-------------|-----------------|-----------|---------|---------|---------|---------|
|  |             |                 | CXP1_X4   | CXP2_X4 | CXP3_X4 | CXP5_X4 | CXP6_X4 |
| ROIQuickChangeOff<br>(5120x5120)       | 25M         | BayerBG8        | 58026     | 32540   | 24689   | 14392   | 12060   |
|  |             | BayerBG10       | 72590     | 36181   | 29354   | 18033   | 15132   |
| ROIQuickChange4096x4096<br>(4096x4096) | 16M         | BayerBG8        | 41642     | 22528   | 16156   | 11150   | 7793    |
|  |             | BayerBG10       | 53475     | 25258   | 19797   | 12401   | 9784    |
| ROIQuickChange4096x3072<br>(4096x3072) | 12M         | BayerBG8        | 32540     | 17066   | 12515   | 8419    | 5916    |
|  |             | BayerBG10       | 39822     | 18887   | 14336   | 9557    | 7452    |
| ROIQuickChange3840x2896<br>(3840x2896) | 10M         | BayerBG8        | 28899     | 15160   | 11320   | 7736    | 5461    |
|  |             | BayerBG10       | 37091     | 16952   | 12999   | 8590    | 6883    |
| ROIQuickChange3840x2160<br>(3840x2160) | 4K<br>QFHD  | BayerBG8        | 21617     | 11832   | 8192    | 6257    | 4096    |
|  |             | BayerBG10       | 28444     | 12970   | 9557    | 7054    | 5176    |
| ROIQuickChange2560x2048<br>(2560x2048) | 5M          | BayerBG8        | 17976     | 8533    | 7964    | 5461    | 3868    |
|  |             | BayerBG10       | 24348     | 10410   | 7964    | 5461    | 4949    |
| ROIQuickChange2048x2048<br>(2048x2048) | 4M          | BayerBG8        | 17066     | 7964    | 7907    | 5063    | 3868    |
|  |             | BayerBG10       | 23438     | 8874    | 7907    | 5063    | 4949    |
| ROIQuickChange1920x1440<br>(1920x1440) |             | BayerBG8        | 12515     | 5688    | 5688    | 3868    | 2616    |
|  |             | BayerBG10       | 16156     | 6144    | 5688    | 3868    | 3356    |
| ROIQuickChange1920x1200<br>(1920x1200) | WUXGA       | BayerBG8        | 10695     | 4778    | 4778    | 3299    | 2275    |
|  |             | BayerBG10       | 13425     | 5120    | 4778    | 3299    | 2958    |
| ROIQuickChange1920x1080<br>(1920x1080) | FullHD      | BayerBG8        | 8874      | 4266    | 4266    | 2958    | 1934    |
|  |             | BayerBG10       | 12515     | 4664    | 4266    | 2958    | 2503    |
| ROIQuickChange1280x1024<br>(1280x1024) | SXGA        | BayerBG8        | 7964      | 3868    | 3868    | 2446    | 1820    |
|  |             | BayerBG10       | 11605     | 4323    | 3868    | 2474    | 2446    |
| Subsampling<br>(2560x2560)             |             | BayerBG8        | 19569     | 11548   | 11548   | 6144    | 3868    |
|  |             | BayerBG10       | 21162     | 12401   | 11548   | 6144    | 5120    |

- ◆ ExposureTimeMax : The maximum exposure time

The settable maximum exposure time is indicated corresponding to ROI setting, PixelFormat, and Link rate.

- ◆ PresetShutter1\_Xs : Preset shutter time

When the preset shutter value is set, it shall be reflected to the long time exposure setting value.

| PresetShutter1_Xs | Shutter (s) | Exposure time (μs) |
|-------------------|-------------|--------------------|
| Shutter_1_30s     | 1/30        | 33333 us           |
| Shutter_1_50s     | 1/50        | 20000 us           |
| Shutter_1_60s     | 1/60        | 16667 us           |
| Shutter_1_100s    | 1/100       | 10000 us           |
| Shutter_1_200s    | 1/200       | 5000 us            |
| Shutter_1_500s    | 1/500       | 2000 us            |
| Shutter_1_1000s   | 1/1000      | 1000 us            |
| Shutter_1_2000s   | 1/2000      | 500 us             |
| Shutter_1_5000s   | 1/5000      | 200 us             |
| Shutter_1_10000s  | 1/10000     | 100 us             |
| Shutter_1_30000s  | 1/30000     | 30 us              |

[Note]

- Shutter lines

The next exposure can be started while outputting video for the prior exposure (overlap).

However, please note that there are some cases that shutter lines become noticeable depending on camera operational mode or gain settings used.

## 4.13. Gain

| AnalogControl |           |
|---------------|-----------|
| Gain          | 1.0~8.0   |
| PresetGainX   | (Execute) |

- ◆ Gain : x1 to x8 preferred Gain can be set per x0.25.

[Note]

Functionally, gain up function is up to +8 times. However, the image quality will be reduced when gain setting is increased. We recommend you to evaluate it first.

- ◆ PresetGainX : Preset Gain

When the preset gain is set, it shall be reflected to manual gain.

Manual gain setting values would never be reflected to the preset values.

Preset values cannot be data saved.

| PresetGainX | Magnification | Decibel equivalent |
|-------------|---------------|--------------------|
| Gain_x1     | x1            | 0dB                |
| Gain_x2     | x2            | 6.0dB              |
| Gain_x3     | x3            | 9.5dB              |
| Gain_x4     | x4            | 12.0dB             |
| Gain_x5     | x5            | 14.0dB             |
| Gain_x6     | x6            | 15.6dB             |
| Gain_x7     | x7            | 16.9dB             |
| Gain_x8     | x8            | 18.0dB             |

## 4.14. Black Level Adjustment

- This is the function to adjust black level.

| AnalogControl |       |
|---------------|-------|
| BlackOffset   | 0~255 |

[Note]

- ◆ Black level is adjustable with relative values. When it is increased or decreased by 1, its luminance level changes by approx. 0.3 at 8 bit output, and it changes by approx. 1.2 at 10 bit output.
- ◆ When the lower values than the initial value are set, saturation level would not achieve to the maximum value for output range.
- ◆ At sequence control mode, black level shall be adjusted to the deepest black.

## 4.15. White Balance

| AnalogControl    |             |
|------------------|-------------|
| BalanceWhiteAuto | Off<br>Once |
| BalanceRatioRed  | 0.0~8.0     |
| BalanceRatioBlue | 0.0~8.0     |

- ◆ BalanceWhiteAuto : This is to adjust white balance gain automatically.
  - ◆ Off : Waiting
  - ◆ Once : To adjust white balance automatically by one push.

Please select "Once" of BalanceWhiteAuto to adjust White balance. The function shall return to Off.

Shoot an achromatic colored uniform object to full screen, then execute BalanceWhiteAuto. We recommend you to execute with approx. 50% of signal level.

- ◆ BalanceRatioRed : To set Red gain correspond to Green gain in the range of x0~x8.
- ◆ BalanceRatioBlue : To set Blue gain correspond to Green gain in the range of x0~x8.

In case of BalanceWhiteAuto is Off, Red and Blue gain correspond to Green gain can be set to BalanceRatioRed/BalanceRatioBlue with preferred value within the range of x0~x8.

If "Once" is selected at BalanceWhiteAuto, white balance shall be adjusted automatically, and new Red and Blue gain shall be indicated in BalanceRatioRed/BalanceRatioBlue.

In case of both BalanceRatioRed and BalanceRatioBlue are set to 1.0, white balance shall be invalid.


## 4.16. Shading Correction

- This is a function to correct the peripheral brightness lowering caused by the lens and others used.

| AnalogControl                 |                      |
|-------------------------------|----------------------|
| ShadingCorrectionDataSelector | Table1/Table2/Table3 |
| ShadingCorrection             | True/False           |
| DetectShading                 | (Execute)            |

- ◆ ShadingCorrectionDataSelector  
Select a ShadingCorrection data table from table1, table2 or table3 at ShadingCorrection and DetectShading.
- ◆ ShadingCorrection  
Turn ShadingCorrection "True" to start shading correction according to the shading correction data prepared by ShadingCorrectionDataSelector.

Before shading correction

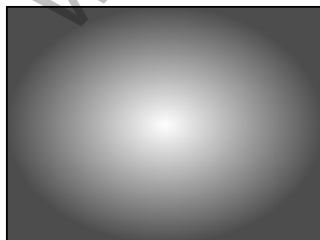

After shading correction



- ◆ DetectShading : Shading detection

Shoot a uniform object such as a pattern box, to full screen, then execute DetectShading, to calculate the correction data prepared by ShadingCorrectionDataSelector automatically in the camera.

## [Note]


- ◆ Turn ShadingCorrection "False" to switch the shading correction data tables.
- ◆ Turn ShadingCorrection "False" to detect shading. When detecting shading, make sure to turn OFF partial scan mode (ROI) and sub-sampling mode. The image size shall be set to 5120×5120 to execute.
- ◆ When changing ReverseY, please re-execute shading detection.
- ◆ Acquire correction data only when the camera is in operation. (Shading correction data cannot be acquired if the camera is not outputting anything).
- ◆ Execute UserSetSave to save the correction data in Table1, Table2, and Table3 on non-volatile memory.
- ◆ Execute UserSetDefault to delete the correction data in Table1, Table2, and Table3.
- ◆ ShadingCorrection cannot be changed when ShandingCorrection is TRUE and Subsampling is On.
- ◆ To change ShadingCorrecion, make sure Subsampling is Off.
- ◆ When obtain correction data with trigger shutter mode, the data sometimes becomes unstable. In this case, change the trigger cycle in small measure and obtain correction data again.

## 4.17. Defective Pixels Correction

- This is the function to detect and correct the pixel defects in the data output from the sensor.
- Data are categorized into two types and controlled.
  - Data at Ex-Factory  
The detected data of white pixel defects and black pixel defects at Ex-Factory are saved. Basically, these data cannot be erased.
  - Data registered by users  
Data increased after shipment or the one registered by users. These data can be erased anytime by Entire Deletion of the user defective pixels (DefectPixelDefault). It cannot be restored by UserSetDefault.
  - Defective Pixels Correction Data  
Data indicated by the coordinate of DefectPixelOffsetX and DefectPixelOffsetY, as well as DefectPixelType.
- The number of data registerable by users is 1024 points. (Note: Up to 128 points can be registered with total amount of data at Ex-Factory and data registered by User).

[CH (Channel)]

Images are processed by 16CH interleave in the camera.

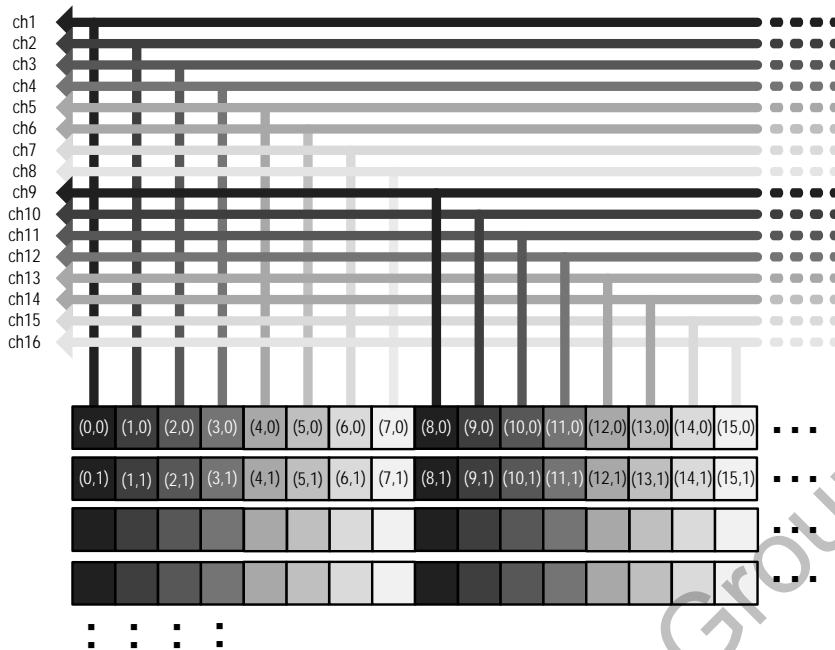

Defective Pixels Correction Control

Defective pixels correction function can be ON or OFF. This function can simultaneously control both data at Ex-Factory and data registered by User .

| AnalogControl            |            |
|--------------------------|------------|
| DefectivePixelCorrection | True/False |

Detection and registration of defect pixels by users

Users can detect and register defective pixels caused by the Image sensor.

| AnalogControl                 |            |
|-------------------------------|------------|
| DefectDetectionThresholdValue | 0~1023     |
| DefectDetection               | (Execute)  |
| DefectDetectionStatus         | (ReadOnly) |
| DefectPixelDefault            | (Execute)  |

- DefectDetectionThresholdValue: To set threshold level to detect defective pixels (1~1023:10bits) by users. The data with luminance level more than the specified level here shall be registered.
  - ※ Four times more value of the image signal level shall be specified as the threshold value with 8 bit image. To initialize it, use UserSetDefault, not DefectPixelDefault.
- DefectDetection: This is to detect the defective pixels registered by user.
  - This is the function to register the pixels automatically if a pixel exceeds the level specified at DefectDetectionThresholdValue. Please be noted that no lights should be in the sensor surface to use this function.
  - The defective pixels correction registered by user shall be reflected right after the execution. When UserSetSave is executed after detecting effective pixels registered by user, the data will be saved in non-volatile memory.

• DefectDetectionStatus:

|                         |   |
|-------------------------|---|
| 0                       | NO DATA   |
| Number (less than 1024) | OK (the number of detected defective pixels)                          |
| 0x000e0001              | Exceeding the acceptable value of defective pixels correction in 1CH. |
| 0x000e0002              | Exceeding the total amount of defective pixel data (more than 1024).  |
| 0x000e0003              | Error other than that above.  |


When it indicates more than 1025, make sure DefectDetectionThresholdValue and DefectivePixelCorrection are appropriate.

To initialize it, use DefectPixelDefault, not UserSetDefault.

• DefectPixelDefault: To initialize DefectDetectionStatus.

[Note]

- Make sure that the camera is working, when you acquire the defective pixels correction data. (DefectDetection is not available when the camera is not outputting.)
- Turn off Custom ROI mode,, Sub-Sampling, ReverseX, ReverseY, Sequence control, and Shading Correction to detect defective pixels. (Set 5120×5120 original size to detect defective pixels.)
- When you change the Threshold value in DetectDefectionThresholdValue to acquire defective pixels correction anew, re-acquire a defective pixels correction data after deleting an old data by executing DefectPixelDefault. The value of DefectDetectionThresholdValue won't change so that please specify it separately.
- The registerable number of pixel defects and the correctable number of pixel defects may not be always the same because of the following reasons.
  - (1) With white defects detection, if one of the strip reads reached the maximum number, correction could not be performed. In such case, the data up to that point are registered, error is output, and operation ends.
  - (2) If no effective pixel exists with up next, down next, right next, or left next to the pixel to be corrected, this pixel can be registered but cannot be corrected.

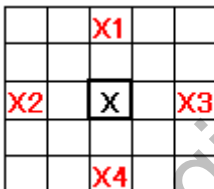

For example, when X1, X2, X3, and X4 are already registered as defected pixels, X can be added to be registered but it cannot be corrected.

□ Indication of Defective Pixels

To indicate the coordinate of defective pixels registered by User.

| AnalogControl            |                        |
|--------------------------|------------------------|
| RegisteredDefectSelector | UserState/InitialState |
| DefectPixelNumber        | 1~1024                 |
| DefectPixelOffsetX       | (ReadOnly)             |
| DefectPixelOffsetY       | (ReadOnly)             |
| DefectPixelType          | (ReadOnly)             |

- RegisteredDefectSelector: To select a type of a registered defective pixels.
- DefectPixelNumber: To set numbers to registered pixels.(1~1024)  
To designate numbers to tables of defective pixels at Ex-Factory and registered by user.
- DefectPixelOffsetX: To indicate X coordinate of defective pixels designated by DefectPixelNumber.  
When you designate non-defective pixel data number, 8191 is indicated.
- DefectPixelOffsetY: To indicate Y coordinate of defective pixels designated by DefectPixelNumber.  
When you designate non-defective pixel data number, 8191 is indicated.

- ♦ DefectPixelType: To indicate a type designated by DefectPixelNumber.
  - 0: No Data
  - 1: White Defects at Ex-Factory
  - 2: Black Defects at Ex-Factory
  - 6: Defects registered by user.

| AnalogControl           |            |
|-------------------------|------------|
| ChannelNumber           | 0~15       |
| DefectPixelChannelCount | (ReadOnly) |

- ♦ ChannelNumber: To specify the channel number for defect processing.
- ♦ DefectPixelChannelCount: This is to indicate the number of defects for the channel number specified with ChannelNumber. The number of defects indicated for the specified channel number is the sum total of the defects at ex-factory and the one registered by user.

#### 4.18. Link Speed and Link Count

| Transfer Control |         |
|------------------|---------|
| ConnectionConfig | CXP1_X4 |
|                  | CXP2_X4 |
|                  | CXP3_X4 |
|                  | CXP5_X4 |
|                  | CXP6_X4 |

- ♦ CXP1\_X4 : Link speed=1.250Gbps, Link count=4
- ♦ CXP2\_X4 : Link speed=2.500Gbps, Link count=4
- ♦ CXP3\_X4 : Link speed=3.125Gbps, Link count=4
- ♦ CXP5\_X4 : Link speed=5.000Gbps, Link count=4
- ♦ CXP6\_X4 : Link speed=6.250Gbps, Link count=4

#### 4.19. How to Save and Initialize the Settings

- If you wish to save the setting values, execute UserSetSave. Doing so, the setting values shall be saved in the camera non-volatile memory and the saved settings data shall be reflected when the camera is turned on next time.

| UserSets       |           |
|----------------|-----------|
| UserSetSave    | (Execute) |
| UserSetDefault | (Execute) |

- ♦ UserSetSave : This is to save the setting values of the camera.
  - ♦ UserSetDefault : This is to restore the camera setting values to the ex-factory settings.
- When executing "UserSetDefault", set ConnectionConfig to "CXP3\_X4" to execute.
  - Camera settings shall be restored to the factory settings right after completion of UserSetDefault. However, there would be some cases that command indications are not updated depending on its indication software used. Please make sure to update the command.

#### 4.20. Sequence Control Function

- This is the function to select one set of parameter out of the several preset parameter sets per every trigger input, and apply it to the camera.
- The maximum sixteen kinds of parameter sets can be preset. The following parameters can be set per parameter.

Settable parameter: Shutter, Gain, Start X coordinate, Start Y coordinate, X size, and Y size.

- Operation sequence is specified as "Index". This is to specify the parameter set number to be applied for the maximum sixteen indexes.
- There are three control modes; trigger mode, burst mode, and index mode.

##### 4.20.1 Basic Operation for Sequence Control Function

- Please follow the below steps to use sequence control function.
  - (1) Trigger shutter mode
 

AquisitionControl – According to TriggerSelectorAndActivation, select trigger type and polarity out of the followings, corresponding to the sequence operation.  
FrameStartRisingEdge/ FrameStartFallingEdge/ FrameStartLevelHigh/ FrameStartLevelLow/  
FrameBurstStart
  - (2) Defective pixels correction, Sub-sampling, and ROI settings
 

Turn "False" DefectivePixelCorrection, and turn "OFF" SubsamplingMode. These functions cannot be used with Sequence control function. Set the ROI of ImageFormatControl to ROIQuickChangeOff.
  - (3) Set Max. sixteen set of parameter table for sequence to be used.
  - (4) Selection of the maximum ROI size
 

Select SequencerMaxROIsize bigger than the maximum X and Y size of the one for the parameter set to be used for sequence control.
  - (5) Make sure to turn OFF sequence operational mode (SequencerControl – SequencerActivation), and select the following settings.
 

In case of Trigger mode and Burst mode: Select OFF → FrameStartPredefined  
In case of Index mode: Select OFF → FrameStartIndexSelector
  - (6) Input a trigger pulse to start sequence control operation.
 

In case of burst mode, it stops at the last image screen of sequence when sequence control is completed.
  - (7) Turn OFF SequenceActivation to get back to the status before sequence control.
- Restriction on trigger input timing
 


Restrictions on trigger input timing for sequence control are the same as the one for normal mode.  
In case of Index mode, input trigger signals when Ack is returned after IndexSelectorModeIndexNumber setting is completed.

##### [Note]

- ♦ SequencerActivation shall be turned OFF once, before setting settings for sequence control.
- ♦ With SequencerActivation, UserSetSave is not valid, therefore, set them manually after turning power ON.
- ♦ Sequence starts when SequencerActivation was set to other than OFF, if a trigger had been input in the camera. Make sure not to input any triggers when changing SequencerActivation.
- ♦ Exposure time to input for each parameter shall be smaller values than the specified values in Section 4.12. The Maximum Exposure Time, according to SequencerMaxROIsize and link rate to be used.
- ♦ Sequence may stop with unstable status if operation for normal mode were performed while sequence control is in operation. Please make sure to turn OFF Sequence operation to proceed.

4.2.0.2 Trigger Mode and Burst Mode Operational Outline

- This is the mode to specify Index transition flow in advance.  
The repeating count for each Index, the number of the Index to be used, and Loop count can be set.
- Trigger mode  
The repeat count of Index shall be added every time an external trigger is input, and its parameter is applied to the camera.
- Burst mode  
It operates as the same way as free run at internal sync. mode. Sequence starts with the trigger, and the repeat count of Index shall be added with the camera internal trigger automatically, then its parameter is applied to the camera.
- Operational flow

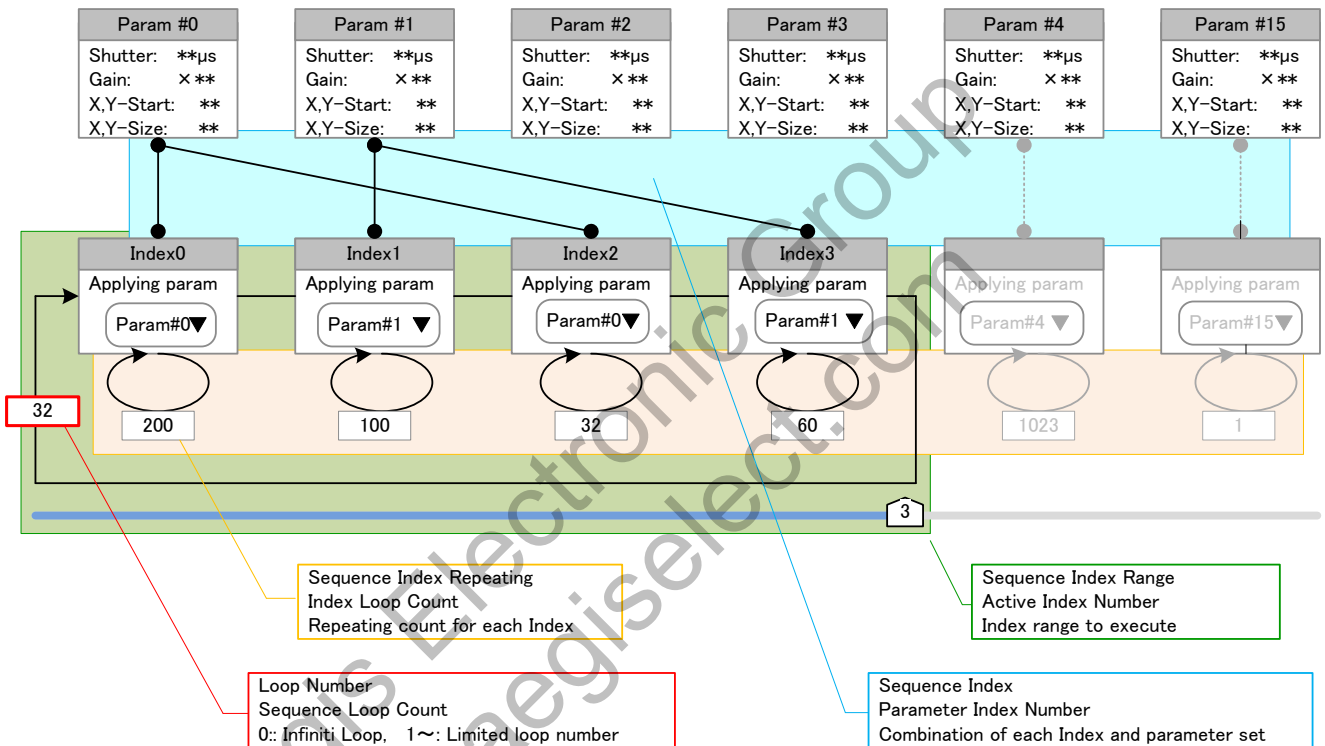


4.2.0.3 Trigger Mode

- The start and stop of sequence operation can be controlled by the edge control or pulse width control of trigger input signals.
- Select and set TriggerSelectorAndActivation to the one out of FrameStartRisingEdge/ FrameStartFallingEdge/ FrameStartLevelHigh/ FrameStartLevelLow to be used. Repeat count, Index number, and Loop count to be used can be set.

(1) Edge Control


- ◆ Sequence starts with a trigger input when TriggerSelectorAndActivation is FrameStartRisingEdge or FrameStartFallingEdge.
- ◆ Exposure time (① and ②) for each frame shall be controlled by the preset sequence parameter set.

- When the image output for the sequence Loop count is completed, sequence operation ends.

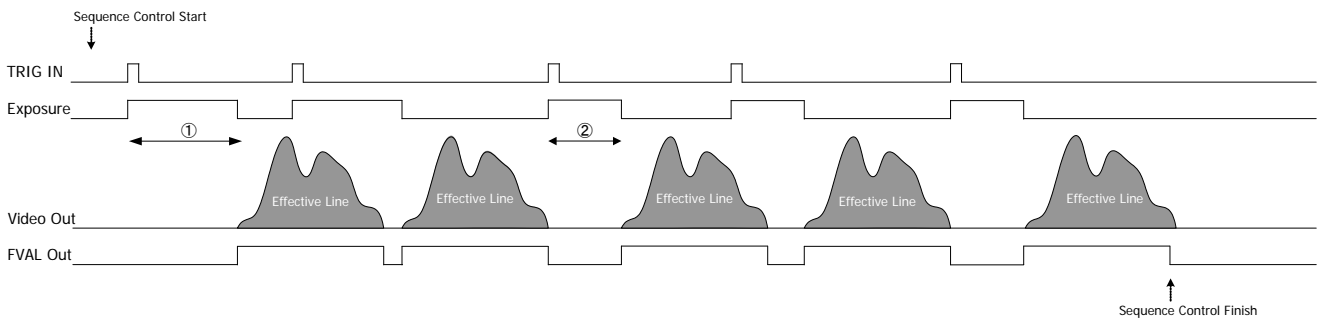

(2) Pulse Width Control

- Sequence starts with a trigger input when TriggerSelectorAndActivation is FrameStartLevelHigh or FrameStartLevelLow.
- Exposure time (1) and (2) for each frame is the pulse width of the trigger.
- When the image output for the sequence loop count is completed, sequence operation ends.

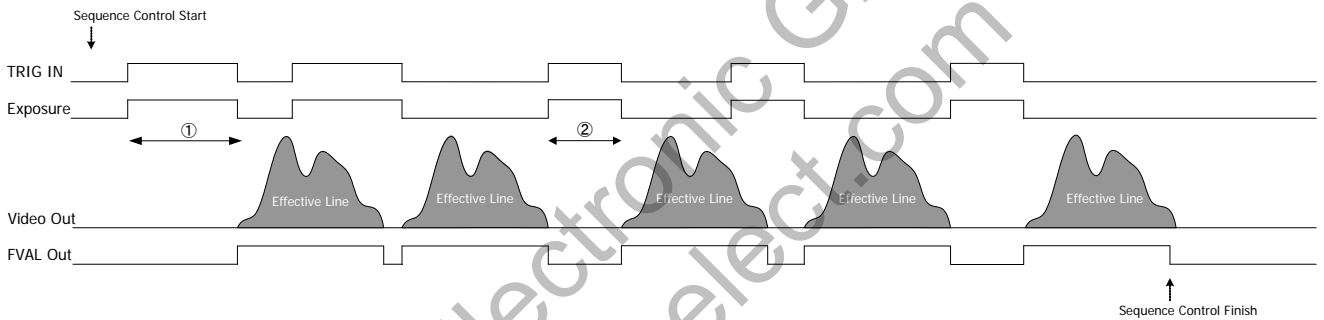


4.20.4 Burst Mode

- The start and stop of sequence operation can be controlled by the edge control or level control of trigger input signals, and register start.
- Set TriggerSelectorAndActivation to FrameBurstStart.


(1) Edge Control

- Sequence starts with a trigger input when SequencerActivation is FrameBurstStartEdge.
- Exposure time for each frame (1) and frame output time (2) shall be controlled by the preset sequence parameter set and its image size setting.
- When the image output for the sequence loop count is completed, sequence operation ends.

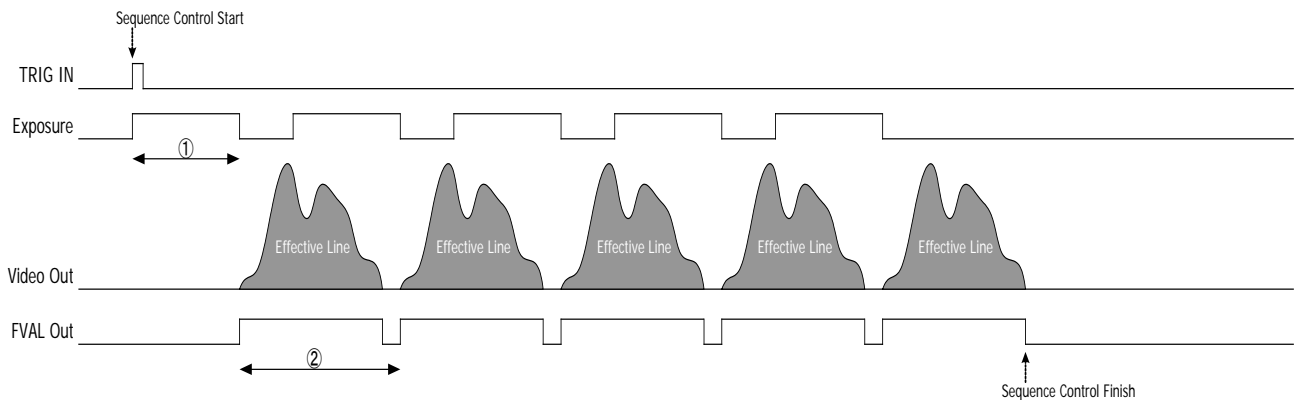

(2) Level Control

- When SequencerActivation is FrameBurstStartLevel, sequence operation is performed while the trigger input is High level.
- Change the trigger input to Low level to stop operation in the middle. If you wish to completely end the operation, turn OFF TriggerSelectorAndActivation.
- Change the trigger input level to High Level again to re-start sequence operation.
- When the image output for the sequence Loop count is completed, sequence operation ends.

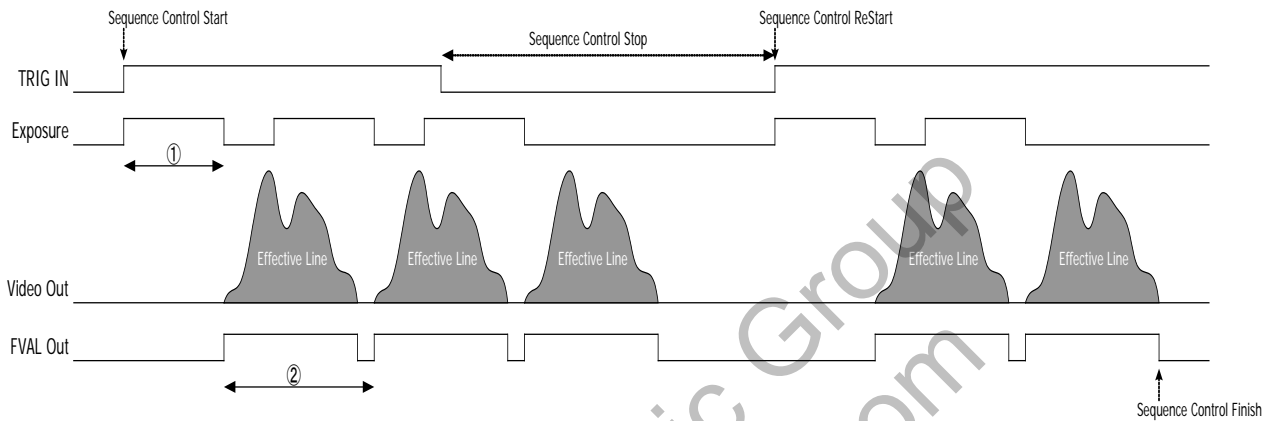


(3) Register Start

- Right after selecting FrameBurstStartSoftware of SequencerActivation, sequence operation is executed as the same way as edge control.

4.2.0.5 Index Mode

- This is the mode to directly specify the Index number to apply by IndexSelectorModeIndexNumber.
- Every time when a trigger is input, the Index parameter set specified by IndexSelectorModeIndexNumber is applied to the camera.
- Select and set TriggerSelectorAndActivation to the one out of FrameStartRisingEdge/ FrameStartFallingEdge/ FrameStartLevelHigh/ FrameStartLevelLow to be used.
- Operational flow

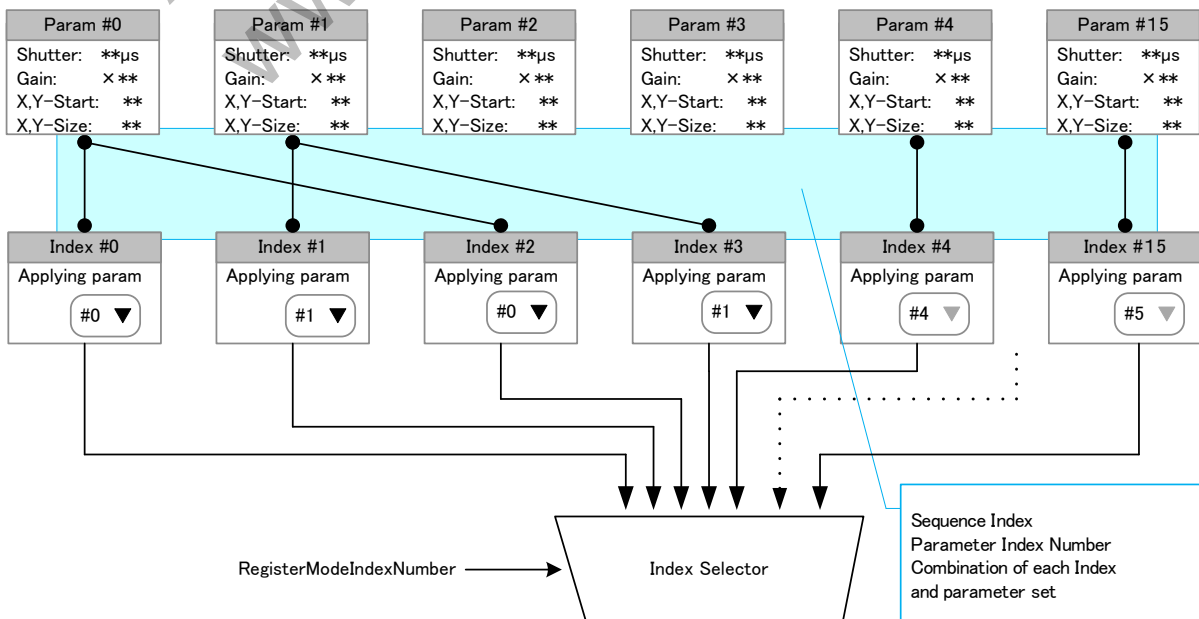

(1) Edge Control

- Exposure time for each frame shall be controlled by the preset sequence parameter set.

(2) Pulse Width Control

- Exposure time is the pulse width of the trigger. Exposure time of parameter set is not referred.

4.20.6 Setting Items for Sequence Control

- To save the settings, execute UserSetSave. Please note that SequencerActivation cannot be saved and will be OFF when power is turned ON next time. When using sequence mode, please set them every time.

- Settings for How to set Sequence Control

| Acquisition Control          |   |
|------------------------------|---|
| TriggerSelectorAndActivation | AquisitionMode<br>FrameStartRisingEdge<br>FrameStartFallingEdge<br>FrameStartLevelHigh<br>FrameStartLevelLow<br>FrameBurstStart |

- FrameStartRisingEdge : Sequence control is set to trigger pulse rising edge control
- FrameStartFallingEdge : Sequence control is set to trigger pulse falling edge control
- FrameStartLevelHigh : Sequence control is set to high level control
- FrameStartLevelLow : Sequence control is set to low level control
- FrameBurstStart : Set to use Sequence control with Burst mode

- Settings for How to Start Sequence Control

| SequencerControl    |  |
|---------------------|--|
| SequencerActivation | OFF<br>FrameStartPredefined<br>FrameStartIndexSelector<br>FrameBurstStartEdge<br>FrameBurstStartLevel<br>FrameBurstStartSoftware |

- SequencerActivation : Set the mode for sequence control
- FrameStartPredefined : Set the sequence control to start trigger mode
- FrameStartIndexSelector : Set the sequence control to start index mode
- FrameBurstStartEdge : Set the sequence control to start burst mode with edge control (Selectable at FrameBurstStart)
- FrameBurstStartLevel : Set the sequence control to start burst mode with level control (Selectable at FrameBurstStart)
- FrameBurstStartSoftware : Set the sequence control to start burst mode with register start (Selectable at FrameBurstStart)

- Settings for Sequence Count and Range

| SequencerControl  |      |
|-------------------|------|
| ActiveIndexNumber | 0~15 |

- ActiveIndexNumber : This is to specify the Index number to repeat at Trigger mode and Burst mode.

| SequencerConfigurationParameter |                             |
|---------------------------------|-----------------------------|
| ParameterIndexNumber            |                             |
| Index0                          | Parameter number of Index0  |
| Index1                          | Parameter number of Index1  |
| Index2                          | Parameter number of Index2  |
| Index3                          | Parameter number of Index3  |
| Index4                          | Parameter number of Index4  |
| Index5                          | Parameter number of Index5  |
| Index6                          | Parameter number of Index6  |
| Index7                          | Parameter number of Index7  |
| Index8                          | Parameter number of Index8  |
| Index9                          | Parameter number of Index9  |
| Index10                         | Parameter number of Index10 |
| Index11                         | Parameter number of Index11 |
| Index12                         | Parameter number of Index12 |
| Index13                         | Parameter number of Index13 |
| Index14                         | Parameter number of Index14 |
| Index15                         | Parameter number of Index15 |

- This is to set the parameter number to execute at Index0 to Index 15

| SequencerConfigurationParameter |                            |
|---------------------------------|----------------------------|
| IndexLoopCount                  |                            |
| IndexCount0                     | Repeating count of Index0  |
| IndexCount1                     | Repeating count of Index1  |
| IndexCount2                     | Repeating count of Index2  |
| IndexCount3                     | Repeating count of Index3  |
| IndexCount4                     | Repeating count of Index4  |
| IndexCount5                     | Repeating count of Index5  |
| IndexCount6                     | Repeating count of Index6  |
| IndexCount7                     | Repeating count of Index7  |
| IndexCount8                     | Repeating count of Index8  |
| IndexCount9                     | Repeating count of Index9  |
| IndexCount10                    | Repeating count of Index10 |
| IndexCount11                    | Repeating count of Index11 |
| IndexCount12                    | Repeating count of Index12 |
| IndexCount13                    | Repeating count of Index13 |
| IndexCount14                    | Repeating count of Index14 |
| IndexCount15                    | Repeating count of Index15 |

- This is to set the repeating count of each Index. (1~1023)

| SequencerConfigurationParameter |                         |
|---------------------------------|-------------------------|
| SequencerLoopCount              | Loop Count of Sequence  |
| IndexSelectorModeIndexNumber    | Index number to execute |

- SequencerLoopCount : This is to set the loop count of Sequence (0~1023) at burst mode.  
When it is "0", the loop count is infinity loop.
- IndexSelectorModeIndexNumber : This is to infinity repeat the specified Index number at Index mode.

□ Settings for Sequence Parameter Set

- There are sixteen parameter sets. When the number of SequencerParameterSetSelector is changed, parameter set is exchanged. Even when the parameter number is changed, the setting data is kept.

| SequencerControl          |                     |
|---------------------------|---------------------|
| PatameterSetSettingNumber | Parameter number    |
| PatameterSetSettingNumber |                     |
| SequencerExposureTime     | Exposure time       |
| SequencerGain             | Gain                |
| SequencerWidth            | Size of X direction |
| SequencerHeight           | Size of Y direction |
| SequencerOffsetX          | X direction Off set |
| SequencerOffsetY          | Y direction Off set |

- PatameterSetSettingNumber : Specify the parameter number and set the next parameter (0~15).
- SequencerExposureTime : This is to set exposure time for each parameter.
- SequencerGain : This is to set gain for each parameter.
- SequencerWidth : This is to set the X direction size for each parameter.
- SequencerHeight : This is to set the Y direction size for each parameter.
- SequencerOffsetX : This is to set the X direction Offset for each parameter.
- SequencerOffsetY : This is to set the Y direction Offset for each parameter.

[Note]

The input value of SequencerWidth, SequencerHeight, SequencerOffsetX, and SequencerOffsetY are limited by the size of SequencerMaxROISize. Input SequencerWidth, SequencerHeight, SequencerOffsetX, and SequencerOffsetY after setting SequencerMaxROISize.

| SequencerControl         |                   |
|--------------------------|-------------------|
| SequencerMaxROISize      | ROISize_5120x5120 |
|                          | ROISize_4096x4096 |
|                          | ROISize_4096x3072 |
|                          | ROISize_3840x2896 |
|                          | ROISize_3840x2160 |
|                          | ROISize_2560x2048 |
|                          | ROISize_2048x2048 |
|                          | ROISize_1920x1440 |
|                          | ROISize_1920x1200 |
|                          | ROISize_1920x1080 |
| ROISize_1280x1024        |                   |
| SequencerMaxExposureTime | (ReadOnly)        |

- SequencerMaxROISize : Make sure to select SequencerMaxROIsize bigger than the maximum X size and Y size of the parameter set to be used at Sequence control.
- SequencerMaxExposureTime : This is to indicate the maximum exposure time useable with the selected SequencerMaxROISize. Exposure time for each parameter shall be set less than this value.

4.20.7 Sequence Status Information


- This is to indicate the status of sequence control.

| SequencerStatus    |            |
|--------------------|------------|
| IndexNumberStatus  | (ReadOnly) |
| RepeatNumberStatus | (ReadOnly) |
| LoopNumberStatus   | (ReadOnly) |
| FrameBurstStatus   | (ReadOnly) |

- IndexNumberStatus : Indicate the Index number in execution.
- RepeatNumberStatus : Indicate the Index repeating number in execution.
- LoopNumberStatus : Indicate the sequence loop count in execution.
- FremeBurstStatus : Indicate the sequence status of Burst mode.

- Image Output of Sequence Status

While sequence operation, the sequence status information can be embedded in the effective image to output.

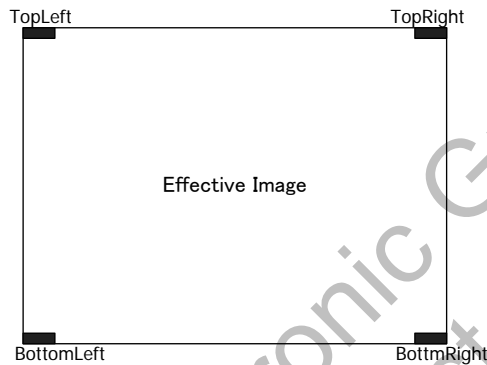

| SequencerControl             |             |                     |
|------------------------------|-------------|---------------------|
| SequencerInformationLocation | Off         | None                |
|                              | TopLeft     | Upper left 5pixels  |
|                              | TopRight    | Upper right 5pixels |
|                              | BottomLeft  | Lower left 5pixels  |
|                              | BottomRight | Lower right 5pixels |

- SequencerInformationLocation : Specify the pixel position to embed the sequence status information.

- For each pixel, index number, index repeating number, and loop count are output as follows.

In case of BayerBG10 MSB ← 10bit → LSB  
 In case of BayerBG8 MSB ← 8bit → LSB

|      |                        |                        |      |
|------|------------------------|------------------------|------|
| pix0 | Index number [3:0]     | "0000"                 | "00" |
| pix1 | Repeating number [7:0] |                        | "00" |
| pix2 | "000000"               | Repeating number [9:8] | "00" |
| pix3 | Loop count [7:0]       |                        | "00" |
| pix4 | "000000"               | Loop count [9:8]       | "00" |

## 5. Factory Settings


| Function                      | Data              | Explanation                 |
|-------------------------------|-------------------|-----------------------------|
| DeviceUserID                  | DeviceUserID      |                             |
| DeviceIndicatorMode           | Active            |                             |
| Width                         | 5120              |                             |
| Height                        | 5120              |                             |
| OffsetX                       | 0                 |                             |
| OffsetY                       | 0                 |                             |
| SubsamplingMode               | Subsampling_Off   |                             |
| ReverseX                      | False             |                             |
| ReverseY                      | False             |                             |
| PixelFormat                   | BayerBG8          |                             |
| ShowCursor                    | Off               |                             |
| CursorX                       | 0                 |                             |
| CursorY                       | 0                 |                             |
| CursorColor                   | White             |                             |
| TestPattern                   | Off               |                             |
| TriggerSelectorAndActivation  | AcquisitionMode   |                             |
| TriggerSource                 | LinkTrigger0      |                             |
| ExposureTime                  | 30.000            |                             |
| Gain                          | 1.000             |                             |
| BlackOffset                   | 10                |                             |
| BalanceWhiteAuto              | Off               |                             |
| BalanceRatioRed               | 1.000             |                             |
| BalanceRatioBlue              | 1.000             |                             |
| ShadingCorrectionDataSelector | Table 1           |                             |
| ShadingCorrection             | False             |                             |
| DefectivePixelCorrection      | True              |                             |
| DefectivePixelThresholdValue  | 0                 |                             |
| RegisteredDefectSelector      | UserState         |                             |
| DefectPixelNumber             | 1                 |                             |
| ChannelNumber                 | 0                 |                             |
| ConnectionConfig              | CXP3_X4           |                             |
| SequencerMaxROISize           | ROISize_5120x5120 |                             |
| SequencerInformationLocation  | Off               |                             |
| ActiveIndexNumber             | 0                 |                             |
| SequencerActivation           | Off               |                             |
| Index0~Index15                | 0~15              | The same value as the Index |
| Index0Count~Index15Count      | 1                 | All 1                       |
| SequencerLoopCount            | 0                 |                             |
| IndexSelectorModeIndexNumber  | 0                 |                             |
| ParameterSetSettingNumber     | 0                 |                             |
| SequencerExposureTime         | 30.000            |                             |
| SequencerGain                 | 1.000             |                             |
| SequencerWidth                | 5120              |                             |
| SequencerHeight               | 5120              |                             |
| SequencerOffsetX              | 0                 |                             |
| SequencerOffsetY              | 0                 |                             |

※ Factory setting values are the same as the one for UserSetDefault command.

Aegis Electronic Group  
www.aegiselect.com

6. Dimensions


6.1. Camera Dimensions

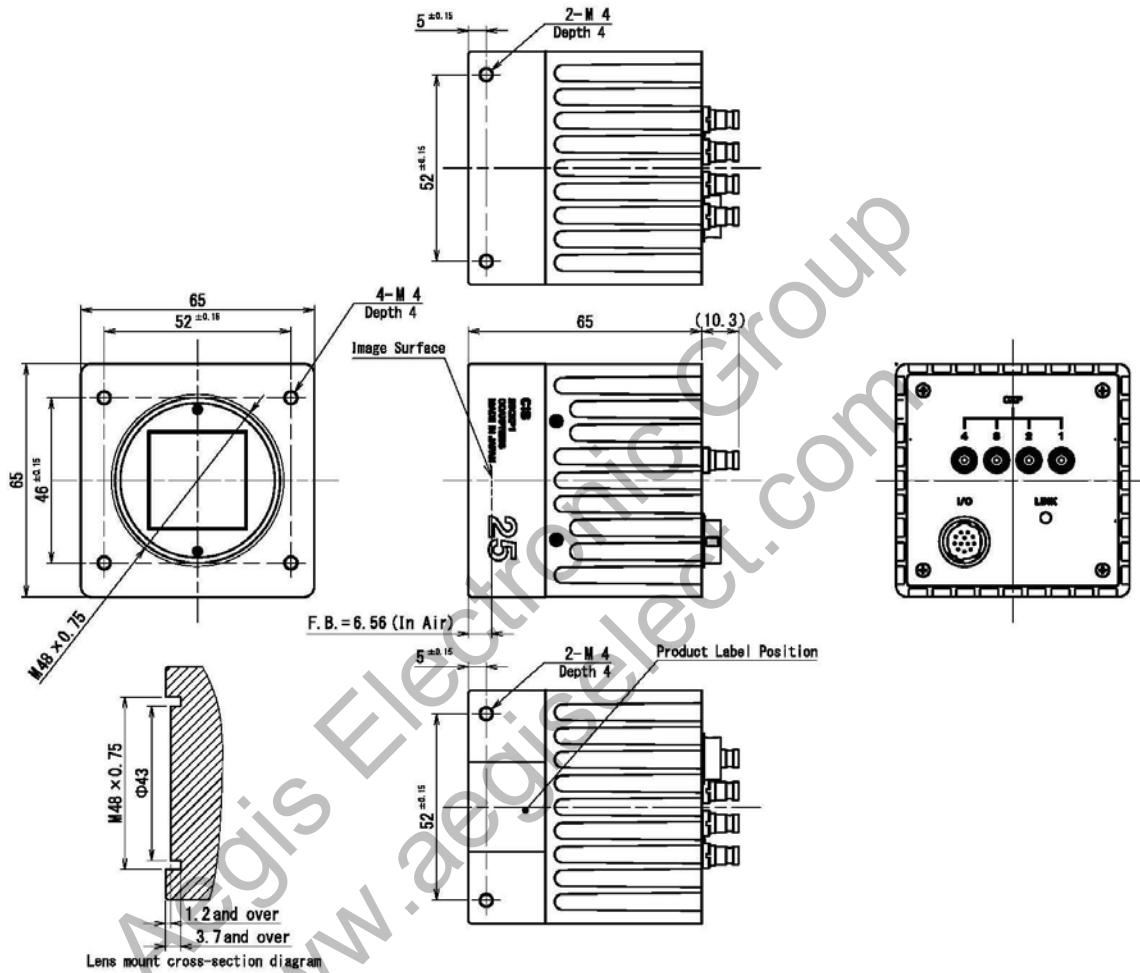

Note 2) Lens mount screw complies with M4.8 x 0.75-6H. Please refer to JIIA LE-004-2011.  
 Note 1) Please make sure the protrusion portion does not interfere with the lens selected.  
 Refer to the lens mount cross-section diagram for the details.

935-0042-00  
 (Unit:mm)

6.2. Optical Axis Accuracy

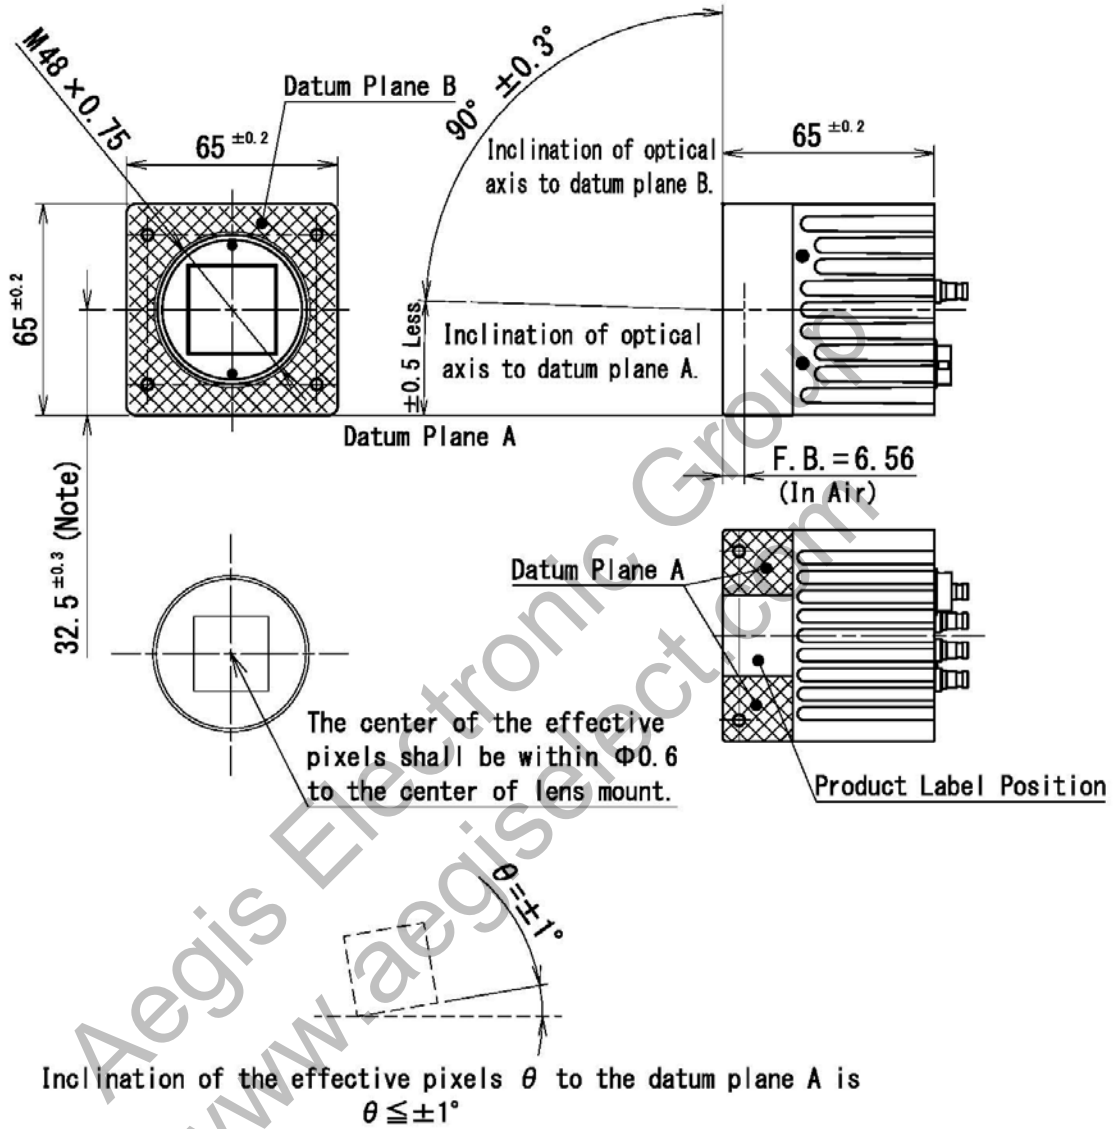

Note : Dimensions from datum plane A to the center of the lens mount.

937-0013-00  
(Unit : mm)

## 7. Case for Indemnity (Limited Warranty)

### 7.1. Product Warranty

The term of warranty of this product is within 3 years from the date of shipping out from our factory.

If you use the product properly and discover a defect during the warranty period, and if that was caused by designing or manufacturing, CIS Corporation, at its option, repairs or replaces it at no charge to you. Products out of warranty period will be subject to charge. CIS repairs the products as long as it is repairable.

CIS shall be exempted from taking responsibility and held harmless for damages or losses incurred by the following cases.

- In case damages or losses are caused by earthquake, lightning strike, fire, flood, or other acts of God.
- In case damages or losses are caused by deliberate or accidental misuse by the user, or failure to observe the information contained in the instructions in this Product Specification and Operational Manual. In case damages or losses are caused by repair or modification conducted by the customer or any unauthorized party.

### 7.2. CMOS Pixel Defect

CIS compensates the noticeable CMOS pixel defects found at the shipping inspection prior to our shipment. On very rare occasions, however, CMOS pixel defects might be noted with time of usage of the products. Cause of the CMOS pixel defect is the characteristic phenomenon of CMOS sensor itself and CIS is exempted from taking any responsibilities for them. Should you have any questions on CMOS pixel defects compensation please contact us.

### 7.3. Product Support

Should you have any problems in function of the product you purchased, and if you need our further analysis and/or repair, please contact the dealer you purchased it from.